


10 CU. FT. UTILITY STEEL DUMP CART**VOLQUETE UTILITARIO EN
ACERO DE 0,28 M** (Página No.15)

MODEL / MODELO # DC0001

**! CAUTION - FOR YOUR SAFETY**

READ YOUR OPERATOR'S MANUAL COMPLETELY AND CAREFULLY BEFORE ATTEMPTING TO SET UP OR OPERATE YOUR NEW 10 CU. FT. UTILITY STEEL DUMP CART. ALL OPERATORS OF THIS EQUIPMENT SHOULD READ AND UNDERSTAND ALL SAFETY RULES PRINTED ON THE MACHINE AND IN THIS OPERATOR'S MANUAL BEFORE USE.

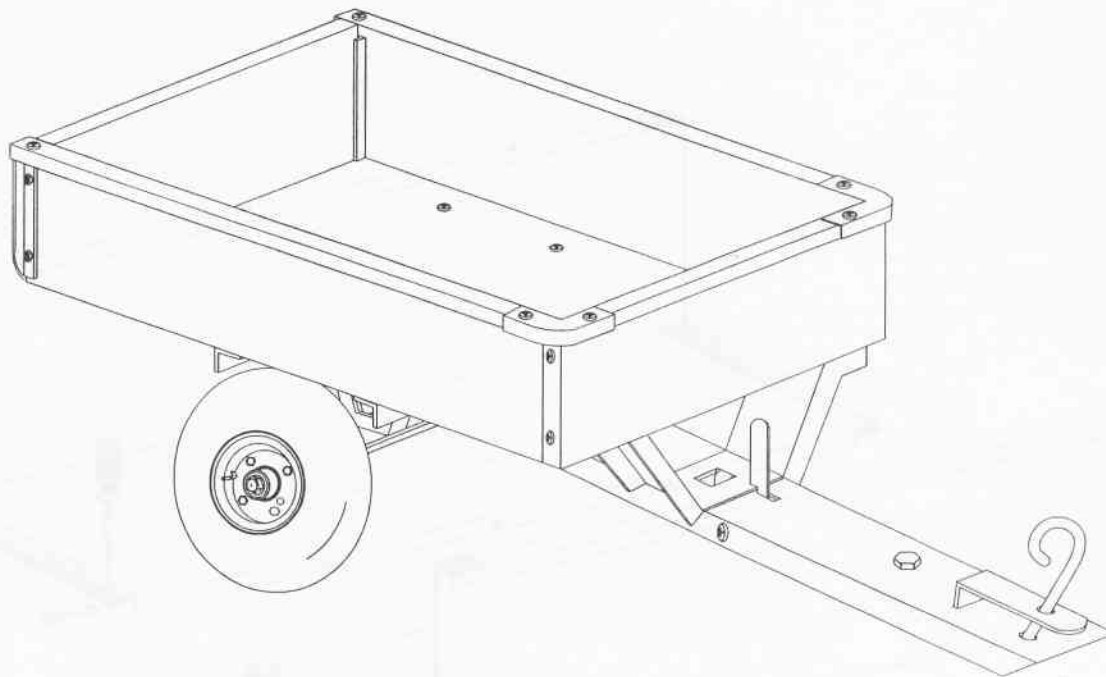


Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 1-800-643-0067, 8 a.m.-6 p.m., Monday-Thursday, 8 a.m.-5 p.m., Friday, EST.

PRINTED IN CHINA

IMPORTANT NOTICE

Prior to assembly, use a screwdriver to remove the protective wood coverings from the corners and panels of the unit. There should be a total of 8 wood coverings to remove.

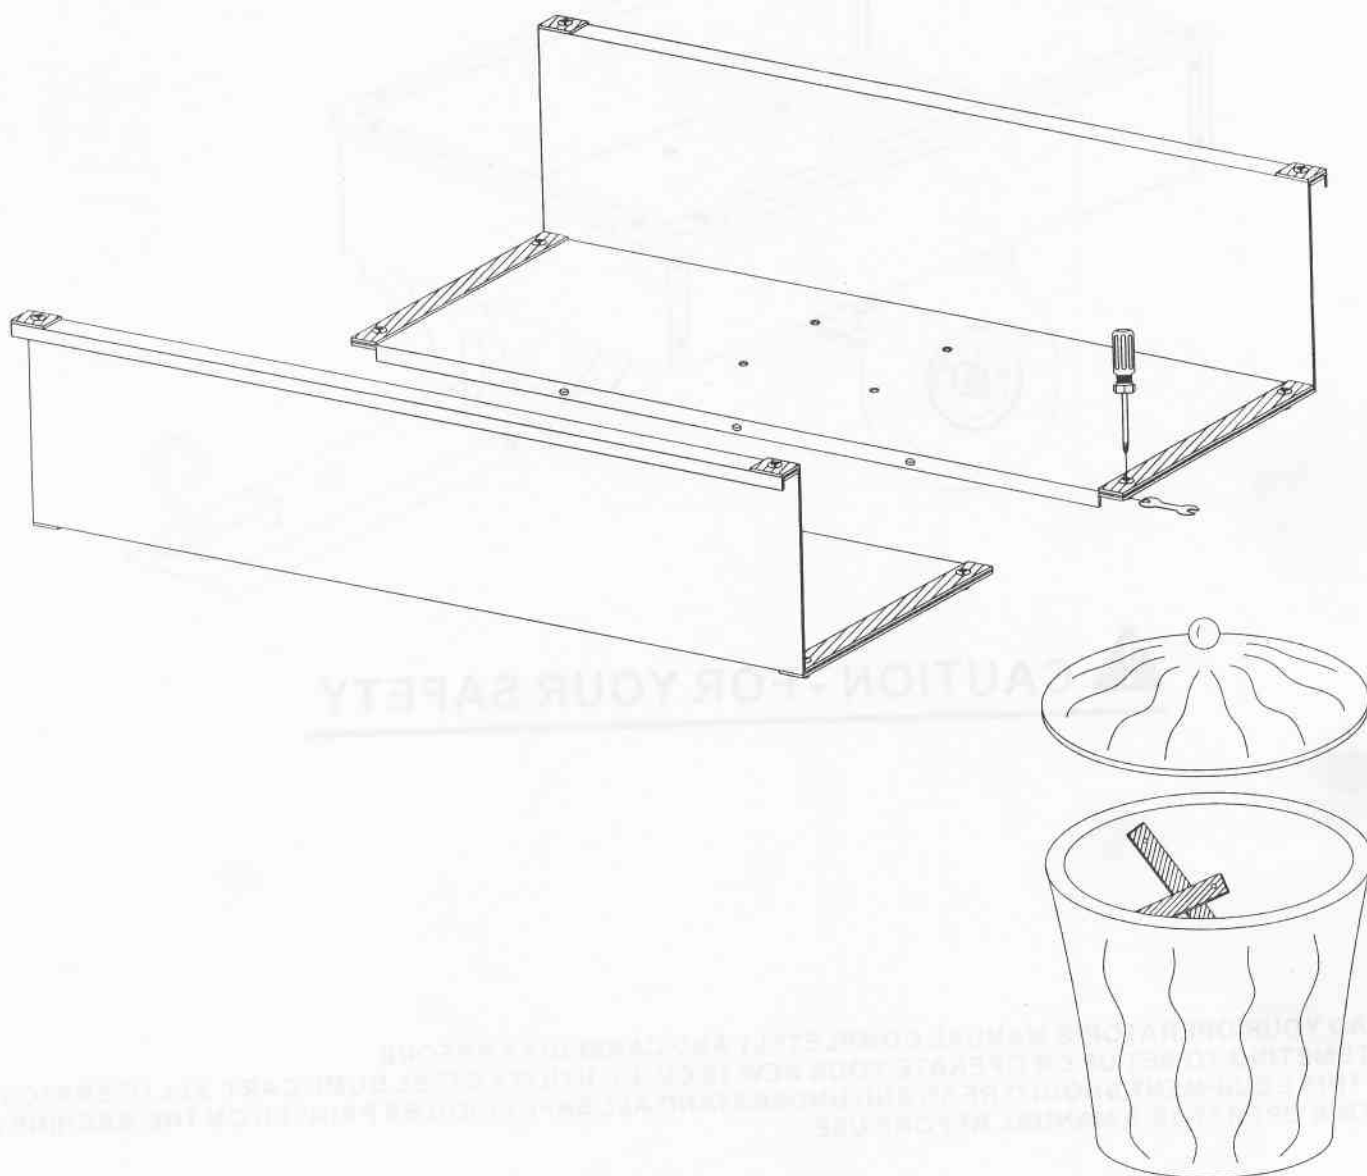

SAFETY RULES

Remember, any power equipment can cause injury if operated improperly or if the user does not understand how to operate the equipment. Exercise caution at all times when using power equipment.



LOOK FOR THIS SYMBOL TO POINT OUT IMPORTANT SAFETY PRECAUTIONS. IT MEANS-ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.



CAUTION: VEHICLE BRAKING AND STABILITY MAY BE AFFECTED WITH THE ADDITION OF AN ACCESSORY OR AN ATTACHMENT. BE AWARE OF CHANGING CONDITIONS ON SLOPES.

Exercise caution at all times when using power


1. Read this owner's manual before attempting to assemble or operate the cart.
2. Read the vehicle owner's manual and know how to operate your tractor before using the cart attachment.
3. Do not at any time carry passengers in this cart. It has not been designed to carry passengers.
4. Never allow children to operate the tractor or the cart attachment.
5. Do not allow adults to operate the tractor or cart attachment without proper instructions.
6. Always begin with the transmission in first (low) and gradually increase speed as conditions permit.
7. Tow the cart at reduced speed over rough terrain and hillsides or near creeks and ditches to prevent tipping over and loss of control. Do not drive too close to a creek or ditch.
8. Maximum weight capacity of the cart is 650 lbs.
9. Vehicle braking and stability may be affected with the attachment of this cart. Do not fill cart to maximum weight capacity without checking the capability of the towing vehicle to safely pull and stop with the cart attached.
10. Do not tow this cart on highways or on public thoroughfares.
11. Maximum towing speed is 10 M.P.H.

PACKAGE CONTENTS

A. Tailgate Guides (2)
B. Corner Caps (2)
C. Latch Lock Lever
D. Hitch Bracket
E. Latch Stand Bracket

F. Tailgate Reinforcement Bracket
G. Tailgate
H. Front Panel
I. Wheel Support
J. Axle

K. Draw Bar Tongue
L. Cart Body (2)
M. Wheels (2)
N. Lock Handle

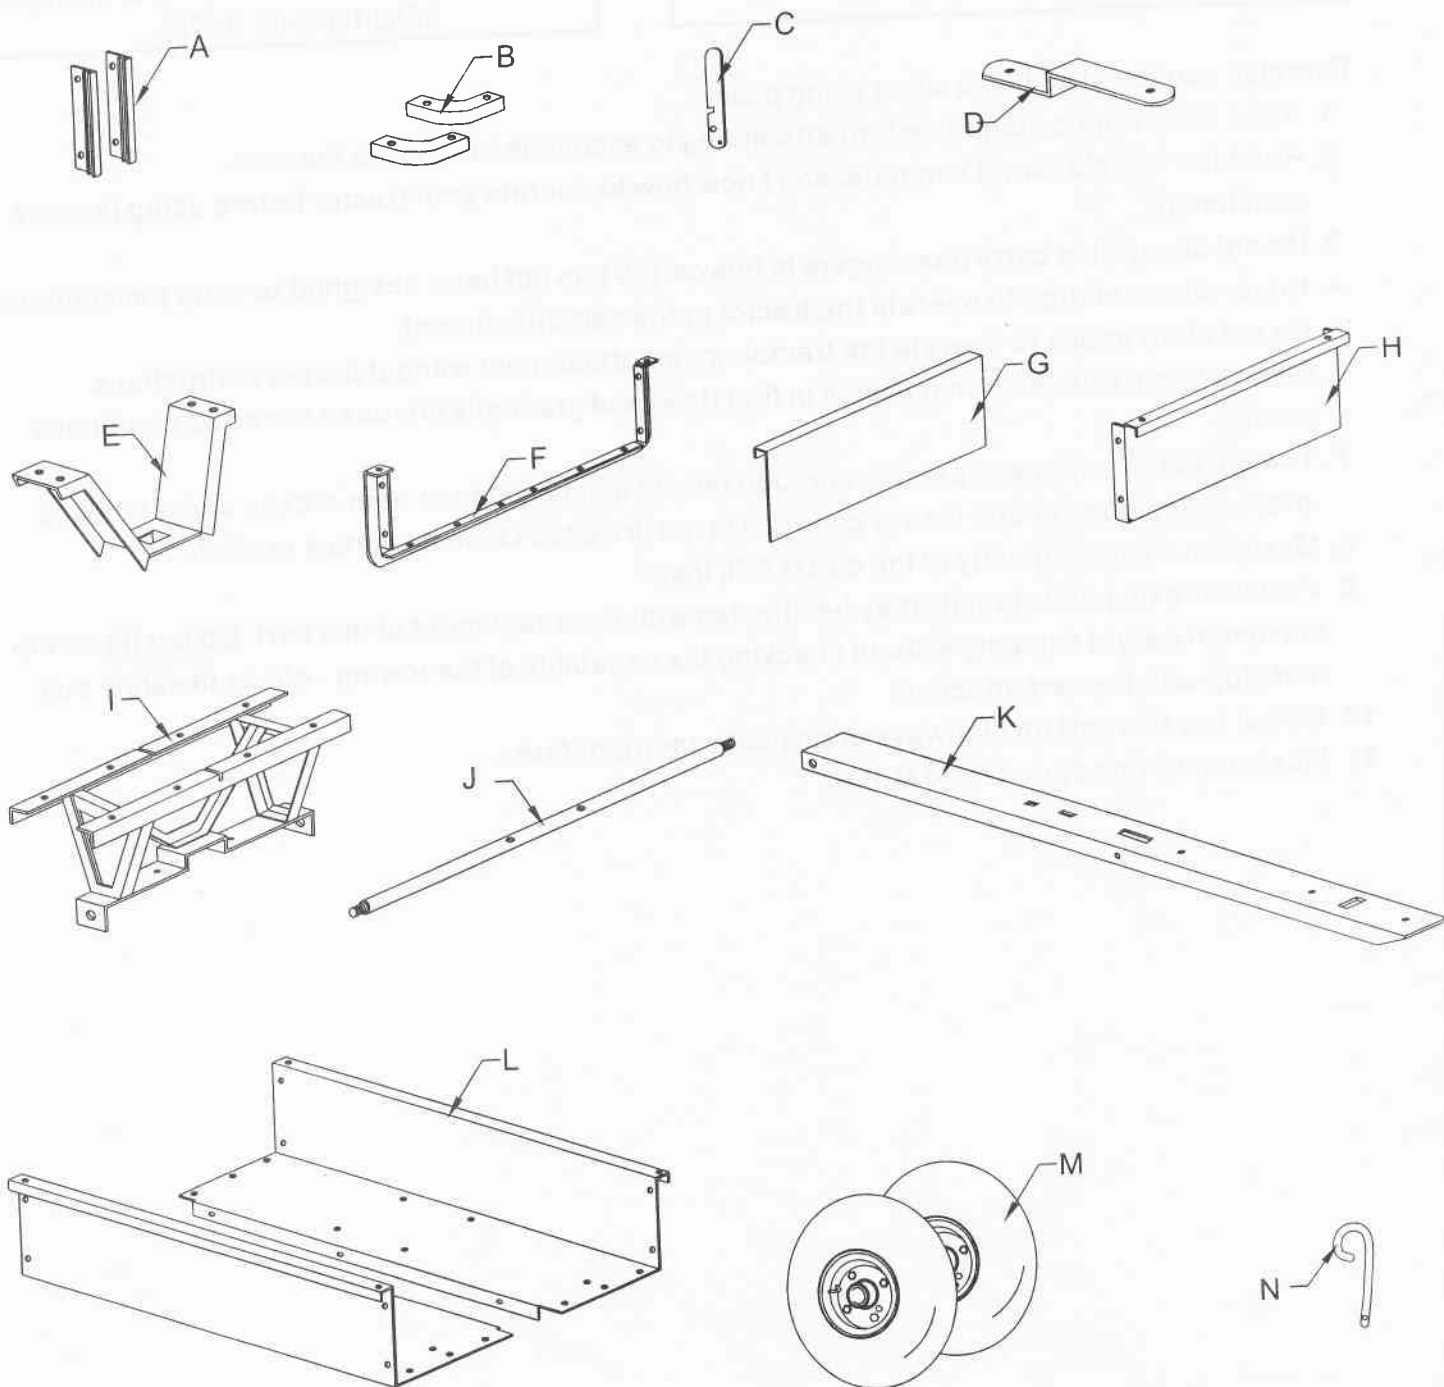
















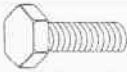

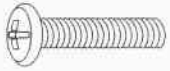
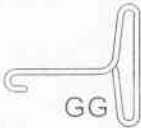
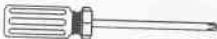
HARDWARE LIST		
 O	 T	 Y
 P	 U	 Z
 Q	 V	 AA
 R	 W	 BB
 S	 X	 CC
 DD	 EE	 FF
		 GG

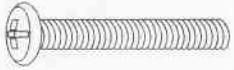FIGURE 1-HARDWARE PACK

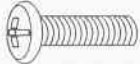REF. NO.	Description	Qty.
O	Hex Bolt, 10 mm x 25 mm	1
P	Bolt, 6 mm x 35 mm	2
Q	Bolt, 8 mm x 95 mm	1
R	Bolt, 8 mm x 14 mm	8
S	Bolt, 6 mm x 12 mm	31
T	Hex Lock Nut 6 mm	33
U	Hex Lock Nut 8 mm	9
V	Hex Nut 8 mm	2
W	Hex Nut 10 mm	1
X	Wheel Acorn Nut	2
Y	Cotter Pin	1
Z	Flat Washer, 10 mm	2
AA	Lock Washer 10 mm	2
BB	Lock Washer, 10 mm	1
CC	Spring	1
DD	Flat Washer, 6 mm	2
EE	Open-End Wrench 6 mm & 8 mm	1
FF	Open-End Wrench 10 mm	1
GG	Spring Assemble Tool	1

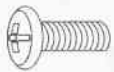ASSEMBLY INSTRUCTIONS

Estimated assembly time for whole set: 90 minutes.

Additional Tools Required (not included): 

Helpful Tools (not included):

Adjustable Wrench

Ratchet and Metric Socket Set

1. Remove the hardware pack and all loose parts from the carton. Make sure the carton is empty before discarding.

2. Lay out all the parts as shown in the carton contents.



CAUTION

DO NOT LEAVE THE CART UNATTENDED IN UPRIGHT POSITION DURING ASSEMBLY. A FALLING CART CAN CAUSE PERSONAL INJURY! PAY CLOSE ATTENTION TO THE STABILITY OF THE CART WHILE IT REMAINS IN AN UPRIGHT POSITION. FOR STABILITY, ASSEMBLE ON A SMOOTH, LEVEL SURFACE.

3. Position cart body (L) halves upright on a smooth level surface such as a garage floor or a paved driveway. Pay attention of remark. Right orientation is for next step. See figure 2.

4. Assemble halves together using 3 of 6 x 12 mm bolts (S) and 6 mm hex lock nuts (T) as shown in figure 2. Do not tighten.

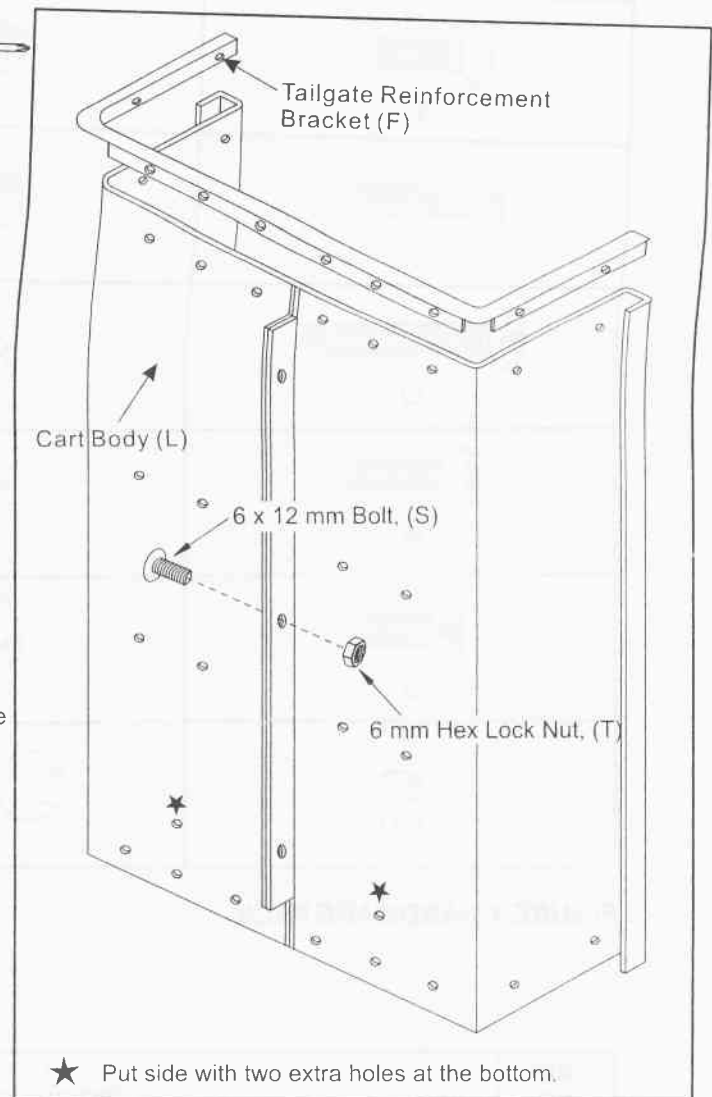


FIGURE 2

5. Position the tailgate reinforcement bracket (F) on outside of cart as shown in figure 3. Assemble to the bottom of the cart body using six 6 x 12 mm bolts (S) and 6mm hex lock nuts (T). Do not tighten. See figure 3.

6. Position the tailgate guides (A) on the inside of the cart body with guide channels to the front as shown in figure 3. Assemble using four 6 x 12 mm bolts (S) and 6 mm hex lock nuts (T). Do not tighten.

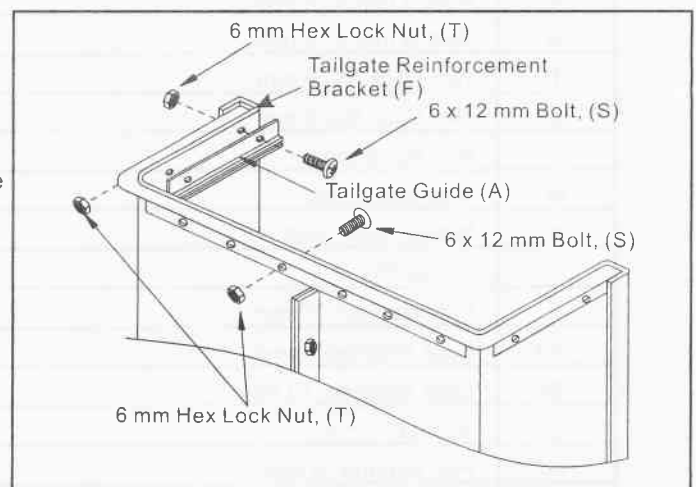


FIGURE 3

bolts assembled in step 5 and then tighten the four hex bolts assembled in step 6. Do not tighten the three bolts that were assembled in step 4.

8. Carefully reverse the position of the cart so that it rests on the tailgate reinforcement bracket, as shown in figure 4.

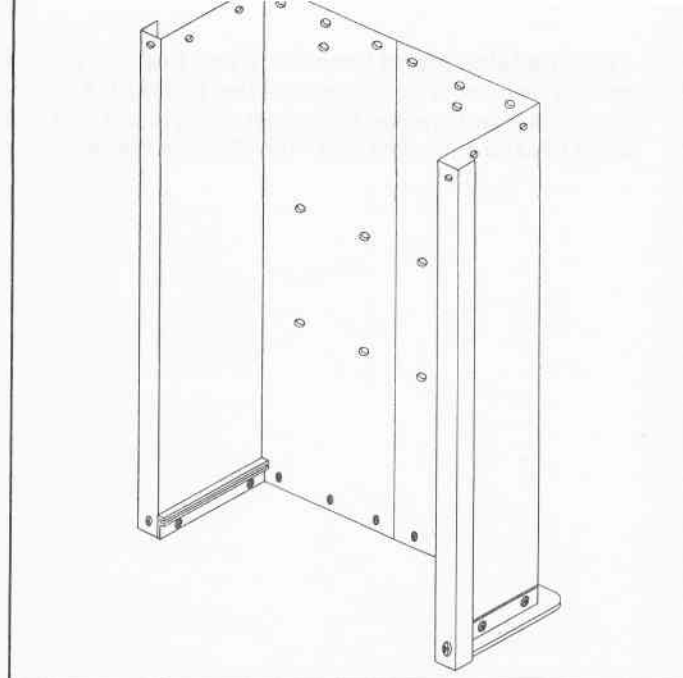


FIGURE 4

9. Assemble the front panel (H) over the end of the cart using eight 6 x 12 mm bolts (S) and 6mm hex lock nuts (T) as shown in figure 5. Leave two holes open in the bottom of the panel as shown in figure 5. With the cart body halves pulled together, tighten the four bolts in the bottom of the front panel, and then tighten the bolts in each side.

At this time tighten the three bolts on the bottom of the cart which were assembled in step 4.

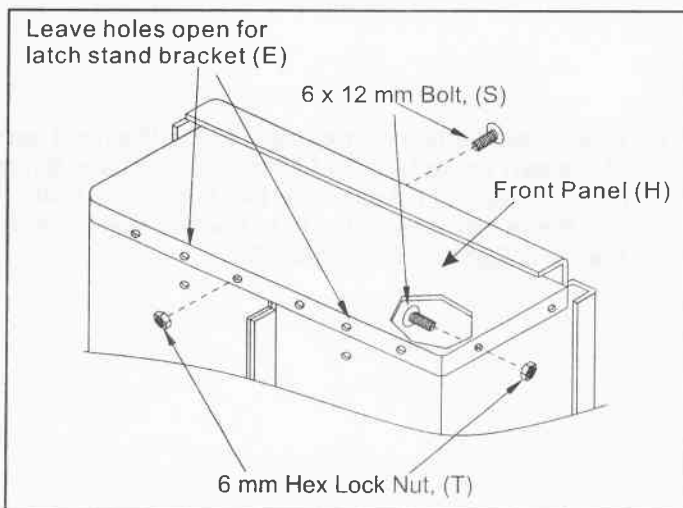


FIGURE 5

10. Assemble the wheel support (I) to the cart using eight 8 x 14 mm bolts (R) and 8 mm hex lock nuts (U) as shown in figure 6. Heads of screws go to the inside of cart. Tighten.

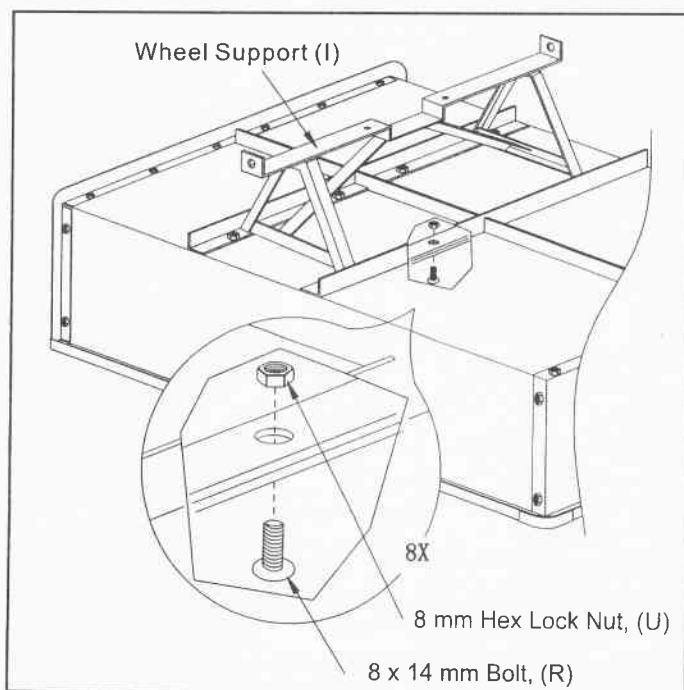


FIGURE 6

11. Turn the latch stand bracket (E) so that the aligning tab on the bottom is at the rear of the bracket. Assemble the latch stand bracket to the cart using four 6 x 14 mm bolts (S) and 6 mm hex lock nuts (T). See figure 7.

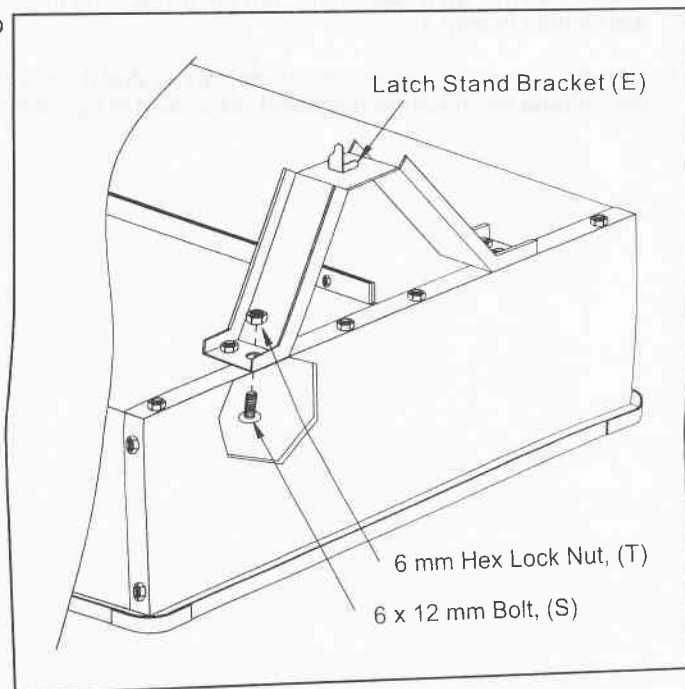


FIGURE 7

12. Assemble the two corner caps (B) to the front corners of the cart using four 6 x 12 mm bolts (S) and 6 mm hex lock nuts (T). Assemble two 6 x 12 mm bolts (S) and 6 mm hex lock nuts (T) to the two rear corners of the cart. Tighten. See figure 8.

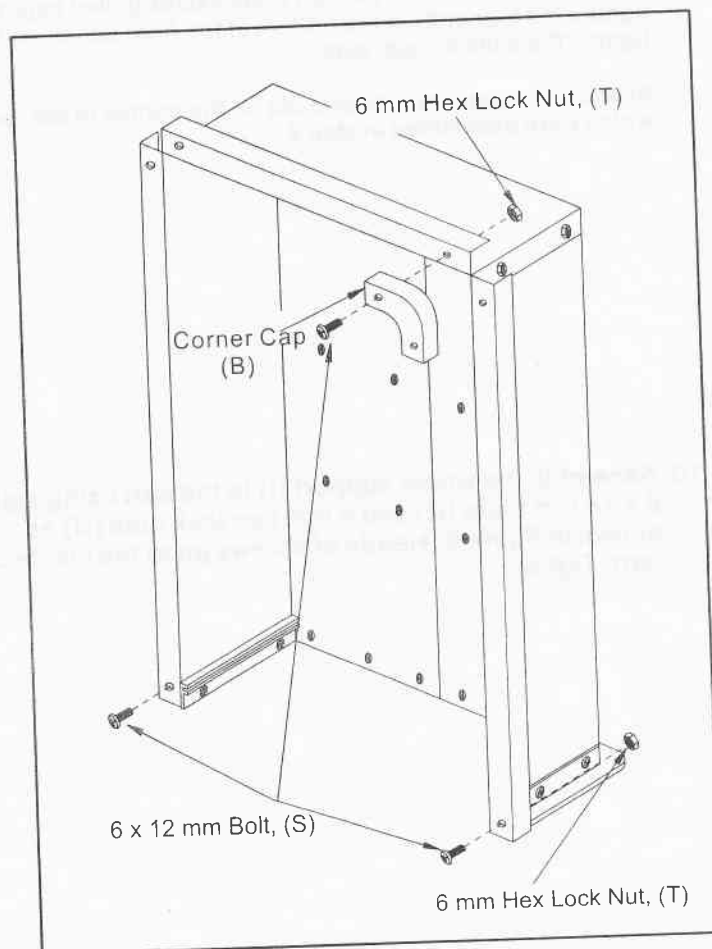


FIGURE 8

13. To prevent accidental tipping during the following assembly procedures, lower the cart to rest upside down on its top flanges, so that the wheel support is facing up. See figure 11.

14. Place the latch lock lever (C) through the slot in the draw bar tongue (K) as shown in figure 9. Assemble the 8 x 95 mm bolt (Q) through the tongue, the lever and two 8 mm hex nuts (V) (one on each side of the lever). Assemble the 8 mm hex lock nut (U) onto the end of the bolt and tighten so that the bolt can still rotate freely. Tighten the two hex nuts (V) against the sides of the lever, centering it in the slot. See figure 9.

5. Attach the spring (CC) to the end hole in the latch lock lever and to the center hole in the draw bar tongue as shown in figure 9.

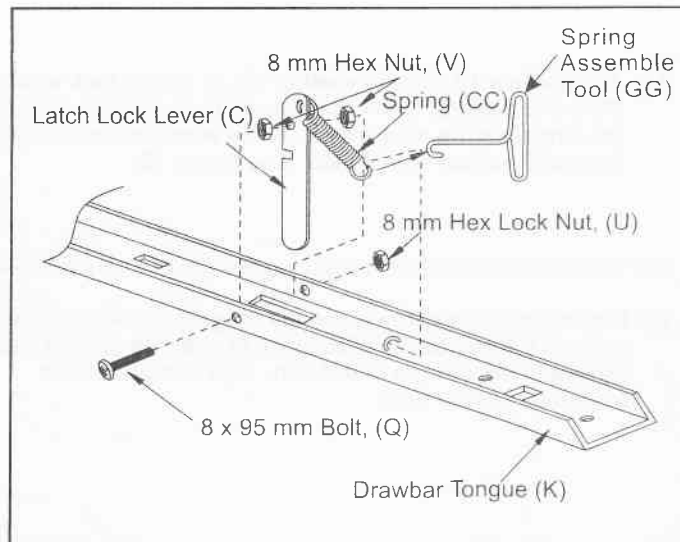


FIGURE 9

16. Assemble the end of the hitch bracket (D) (two holes) down through the slot at the front of the drawbar tongue (K). Fasten it to the tongue using the 10 x 25 mm hex bolt (O), 10 mm lock washer (BB) and 10 mm hex nut (W). Tighten. See figure 10.

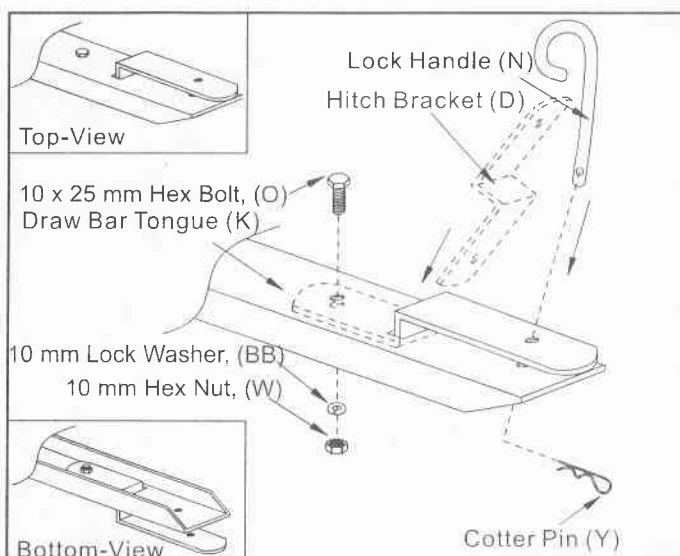


FIGURE 10

17. Assemble the axle (J) through the wheel support (I) and the drawbar tongue (K), with the open side of tongue facing away from the cart. Fasten the axle to the wheel support using two 6 x 35 mm bolts (P), 6 mm flat washers (DD) and 6 mm hex lock nuts (T). Tighten. See figure 11.

Important: Make sure drawbar tongue is securely locked to the latch stand bracket by the latch lock lever.

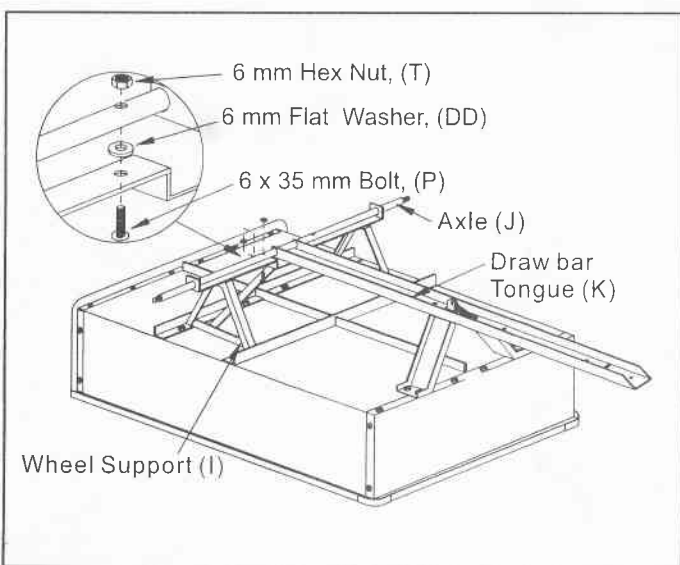


FIGURE 11

18. Assemble a 10 mm flat washer (Z), a 10 mm lock washer (AA) and a wheel with the valve stem facing out. Secure the wheel on the axle with a 10 mm wheel acorn nut (X). Repeat on other end of axle. See figure 12.

19. Turn cart over so that it rests right side up on its wheels.

20. Place the tailgate down into the tailgate guides so that the holes in the bottom lip of tailgate fit over the slotted head screws in the bottom of the cart. This completes the assembly of your cart.

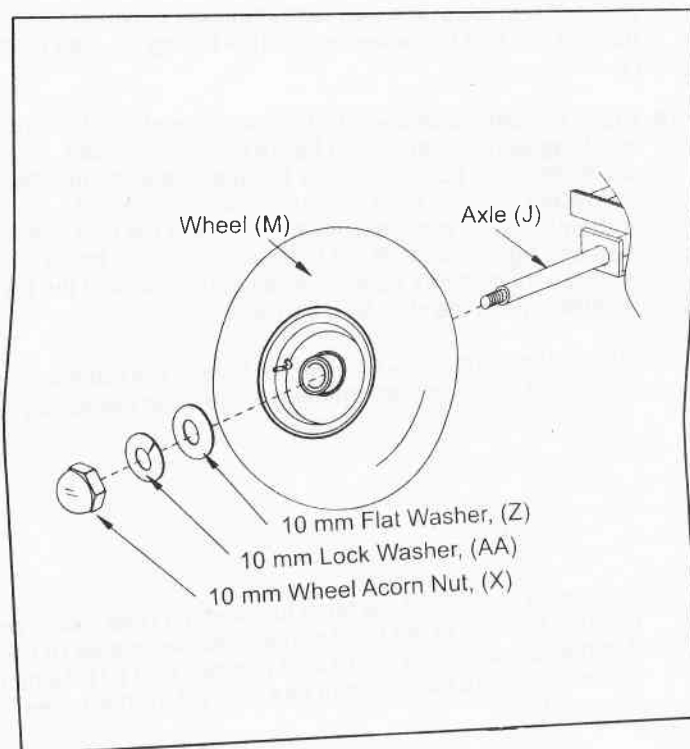


FIGURE 12

OPERATION INSTRUCTIONS

OPERATION



CAUTION: VEHICLE BRAKING AND STABILITY MAY BE AFFECTED WITH THE ADDITION OF AN ACCESSORY OR AN ATTACHMENT. BE AWARE OF CHANGING CONDITIONS ON SLOPES.

1. Refer to the vehicle owner's manual for instructions on safe operation on slopes.
2. For best handling and traction, distribute the weight of the load evenly in the cart.
3. Always test to make sure your tractor has adequate towing and braking capabilities whenever hauling a substantial amount of weight in your cart. Use extra caution when operating on slopes.

➔ IMPORTANT!

DO NOT EXCEED 650 lb. WEIGHT CAPACITY OF CART
One cubic foot of dirt weighs approximately 150 lbs.

4. To dump material from the cart, remove the tailgate by lifting it straight up and out from between the guides. Release the spring latch on the tongue by pulling the latch lock lever forward, away from the cart. The cart bed will then tilt backwards to empty its contents. After emptying, pull the front of the bed downward the cart tongue until the latch snaps into place. Replace the tailgate if desired.
5. The maximum towing speed for this cart is 10 M. P. H.



CAUTION: TO AVOID POSSIBLE INJURY, MAKE SURE THAT NO ONE IS NEAR THE CART BEFORE RELEASING THE LATCH.

MAINTENANCE

1. At the beginning of each season, lubricate the latch, the latch pivot bolt, and the area of the axle where the drawbar tongue pivots with light machine oil.
2. Grease or oil the wheel bearings periodically. Use automotive wheel bearing type grease or 20 weight oil.
3. Keep tires filled to the recommended tire pressure of 12-14 Lbs

PRECISE FIT WARRANTY


The manufacturer warrants to the original purchaser for a period of one (1) year that this product is free from defects in material and workmanship. Warranty void if product use for commercial purposes.

This warranty is not transferable and does not cover products sold damaged or incomplete, sold "as is," sold reconditioned or used as rental equipment. It does not cover damage caused by misuse, neglect, accident, alterations or use and maintenance other than that specified in the owner's manual.

The manufacturer will provide replacement parts or replace the unit at its option. For warranty service call customer service at 1-800-643-0067, 8:00 a.m.-6 p.m. Monday-Thursday, 8:00 a.m.-5 p.m., Friday, EST. DO NOT RETURN PRODUCT TO THE STORE.

The manufacturer will not be held liable for any direct, indirect, incidental or consequential damages. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

PARTS LIST AND EXPLODED VIEW

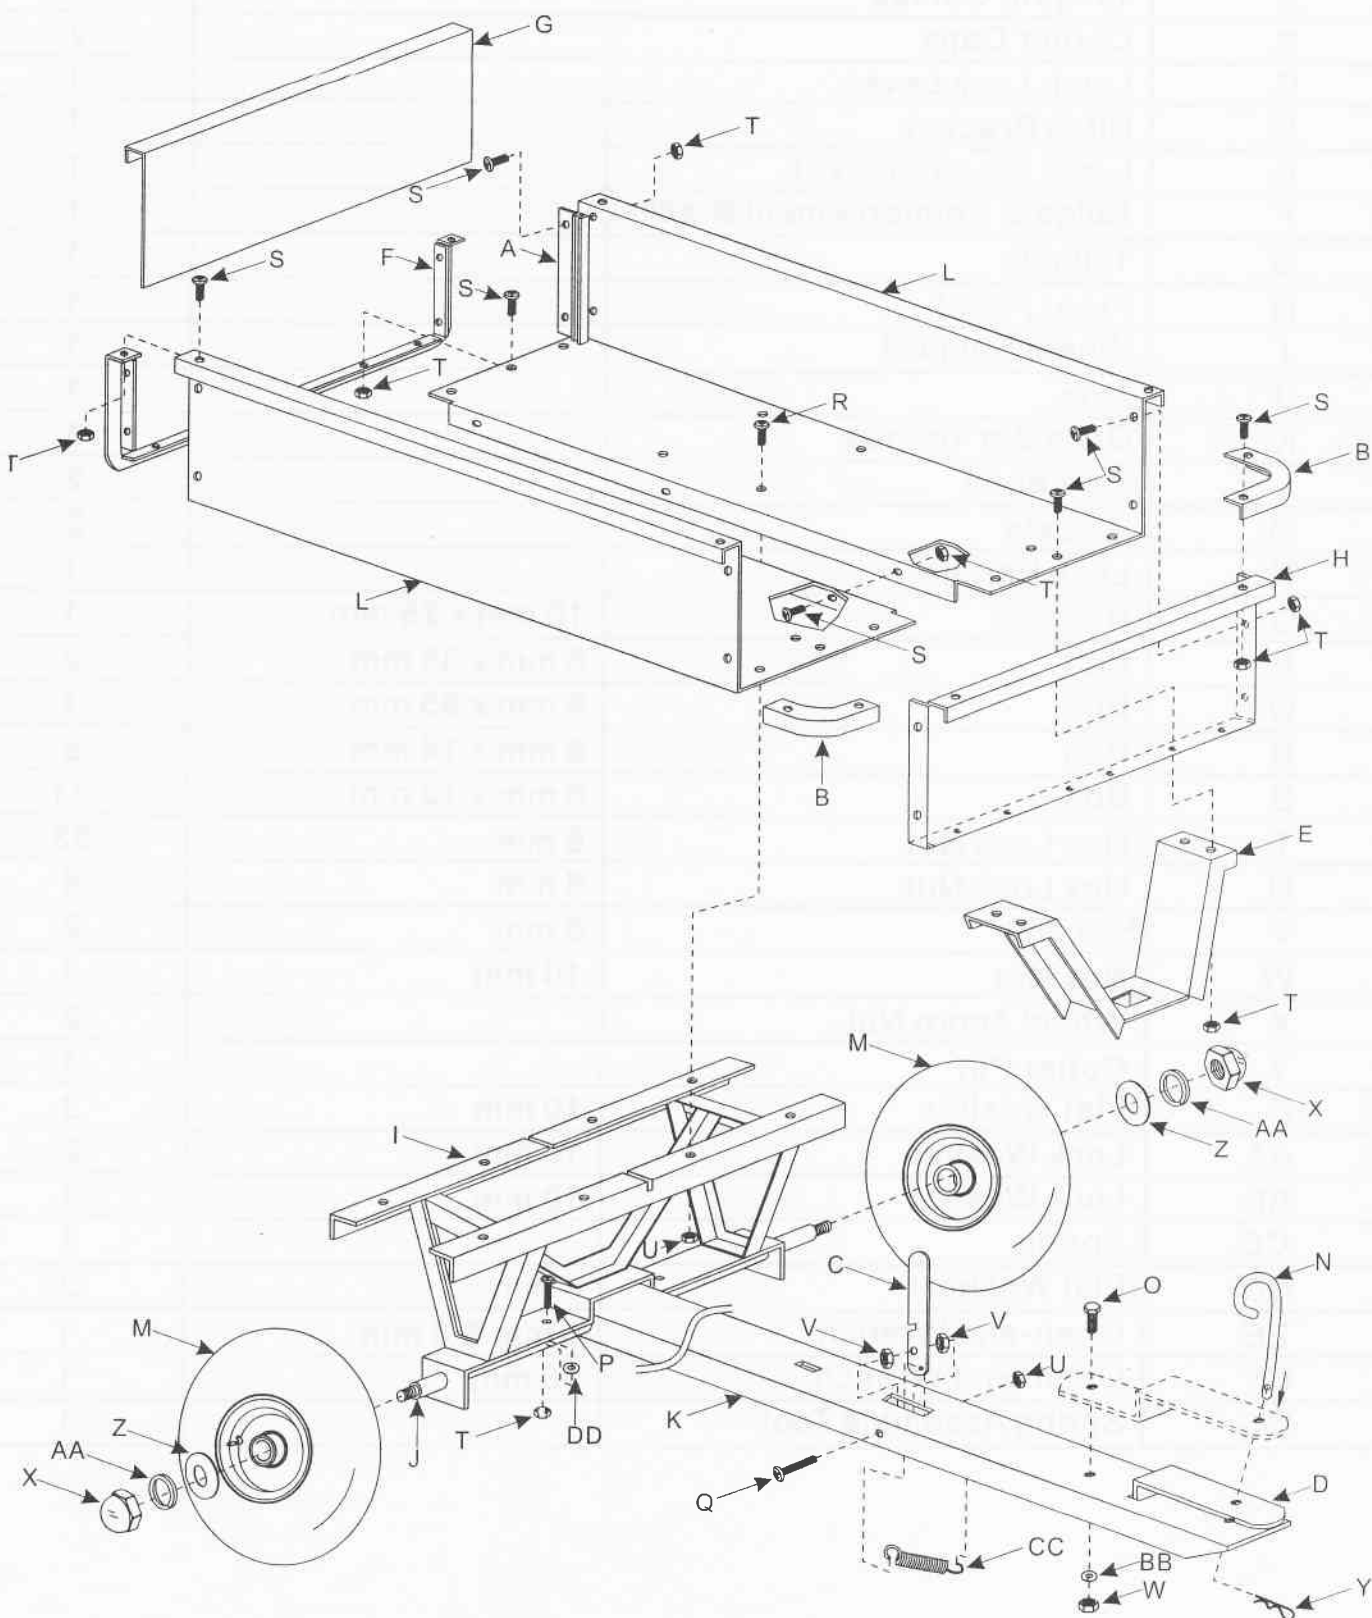

Part#	Description	Size	Qty
A	Tailgate Guides		2
B	Corner Caps		2
C	Latch Lock Lever		1
D	Hitch Bracket		1
E	Latch Stand Bracket		1
F	Tailgate Reinforcement Bracket		1
G	Tailgate		1
H	Front Panel		1
I	Wheel Support		1
J	Axle		1
K	Draw Bar Tongue		1
L	Cart Body		2
M	Wheels		2
N	Lock Handle		1
O	Hex Bolt	10 mm x 25 mm	1
P	Bolt	6 mm x 35 mm	2
Q	Bolt	8 mm x 95 mm	1
R	Bolt	8 mm x 14 mm	8
S	Bolt	6 mm x 12 mm	31
T	Hex Lock Nut	6 mm	33
U	Hex Lock Nut	8 mm	9
V	Hex Nut	8 mm	2
W	Hex Nut	10 mm	1
X	Wheel Acorn Nut		2
Y	Cotter Pin		1
Z	Flat Washer	10 mm	2
AA	Lock Washer	10 mm	2
BB	Lock Washer	10 mm	1
CC	Spring		1
DD	Flat Washer	6 mm	2
EE	Open-end Wrench	6 mm & 8 mm	1
FF	Open-End Wrench	10 mm	1
GG	Spring Assemble Tool		1